


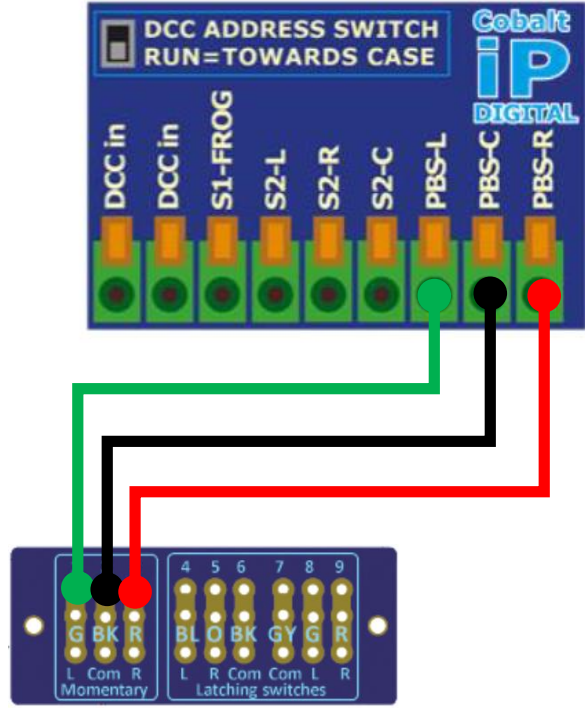

Cobalt S Lever Direct to Cobalt iP Digital

DCC-CP1DiP
Cobalt iP Digital



DCC-CP1S
Cobalt S Point Lever



To reverse the output to match the Lever throw, swap the green and red wires at the relevant Cobalt S Lever or Cobalt iP Digital connection