

## Intelligent Circuit Breaker iP-CB With Accessory Bus

**IMPORTANT**  
Always set the iP-CB trip current with the header to be **LOWER** than the main system maximum current output.

