


NCE PowerCab With Alpha Power, Box & Panel Connected To NCE AutoSwitch

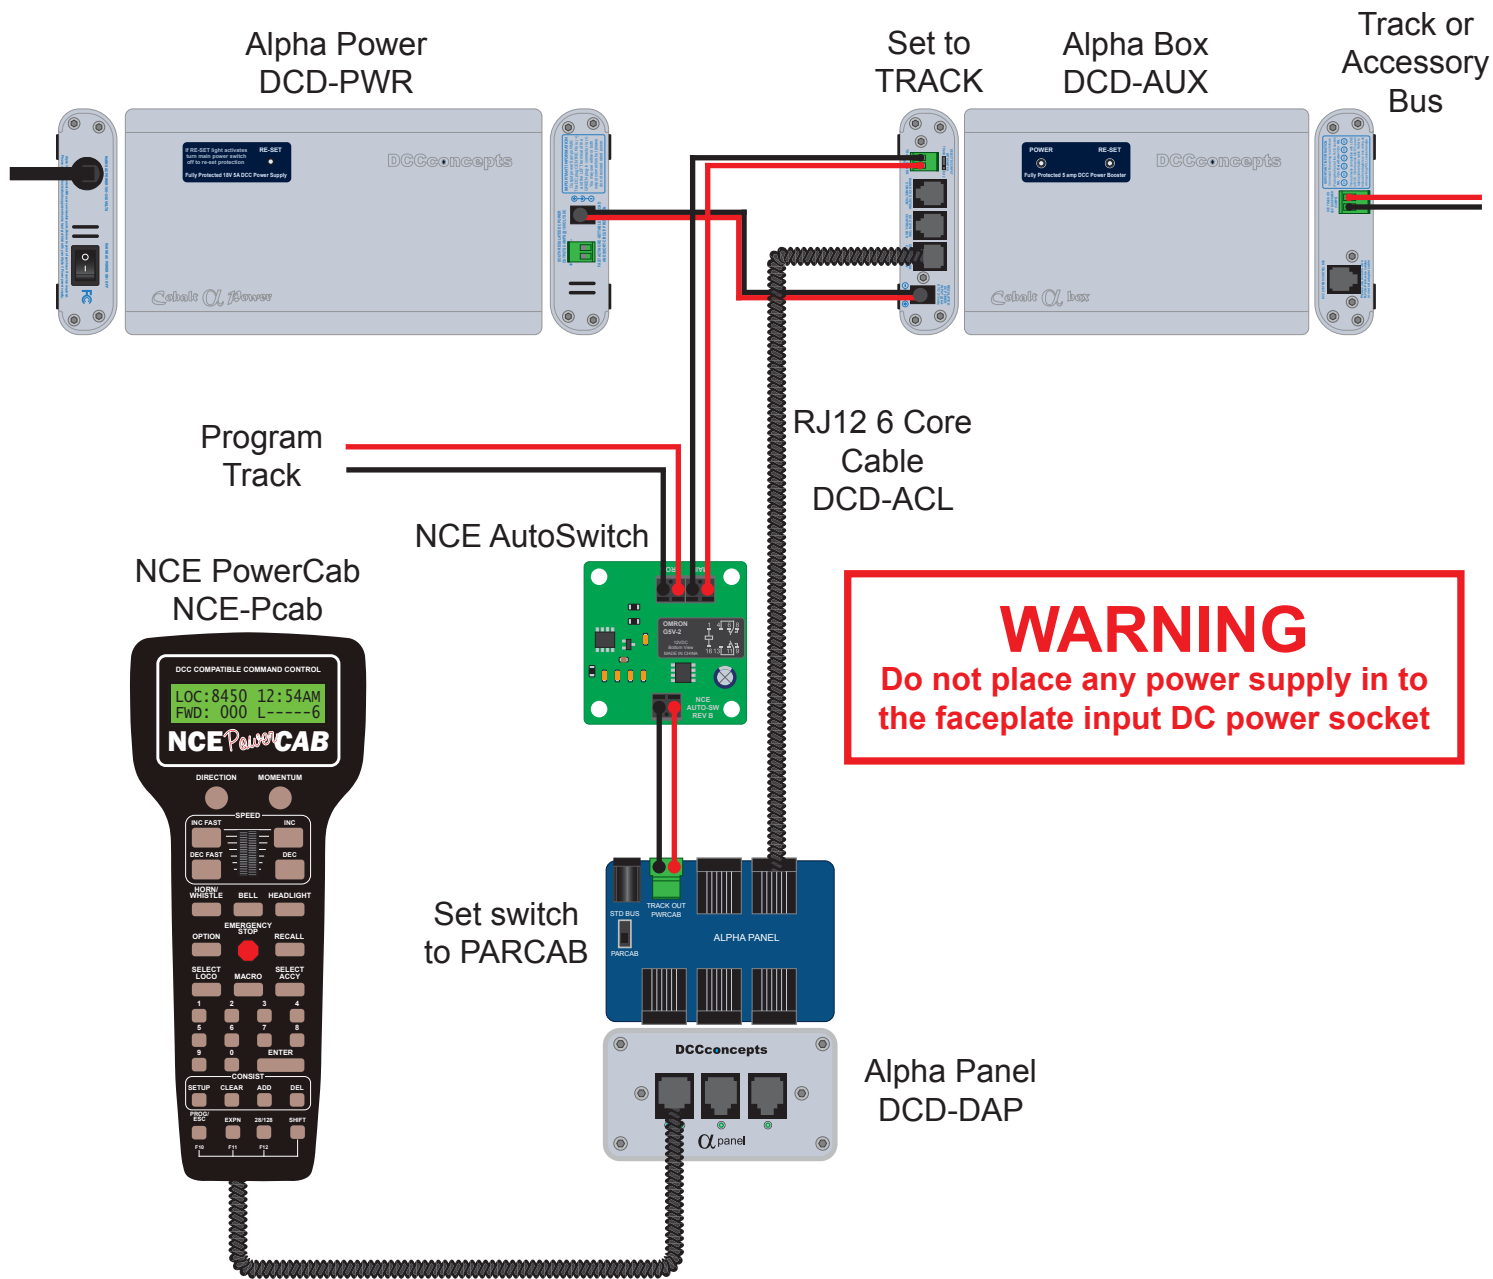

WARNING
Do not place any power supply in to the faceplate input DC power socket

The NCE PowerCab control cable **MUST** be connected to the **LEFT** socket on the NCE PCP faceplate with the LED faceplate at the bottom.

DCD-ACL curly cord or NCE Flat Cord - **NOT THE NCE curly cord.**