


NCE PowerCab With Alpha Power, Box & Panel Connected With Alpha Central

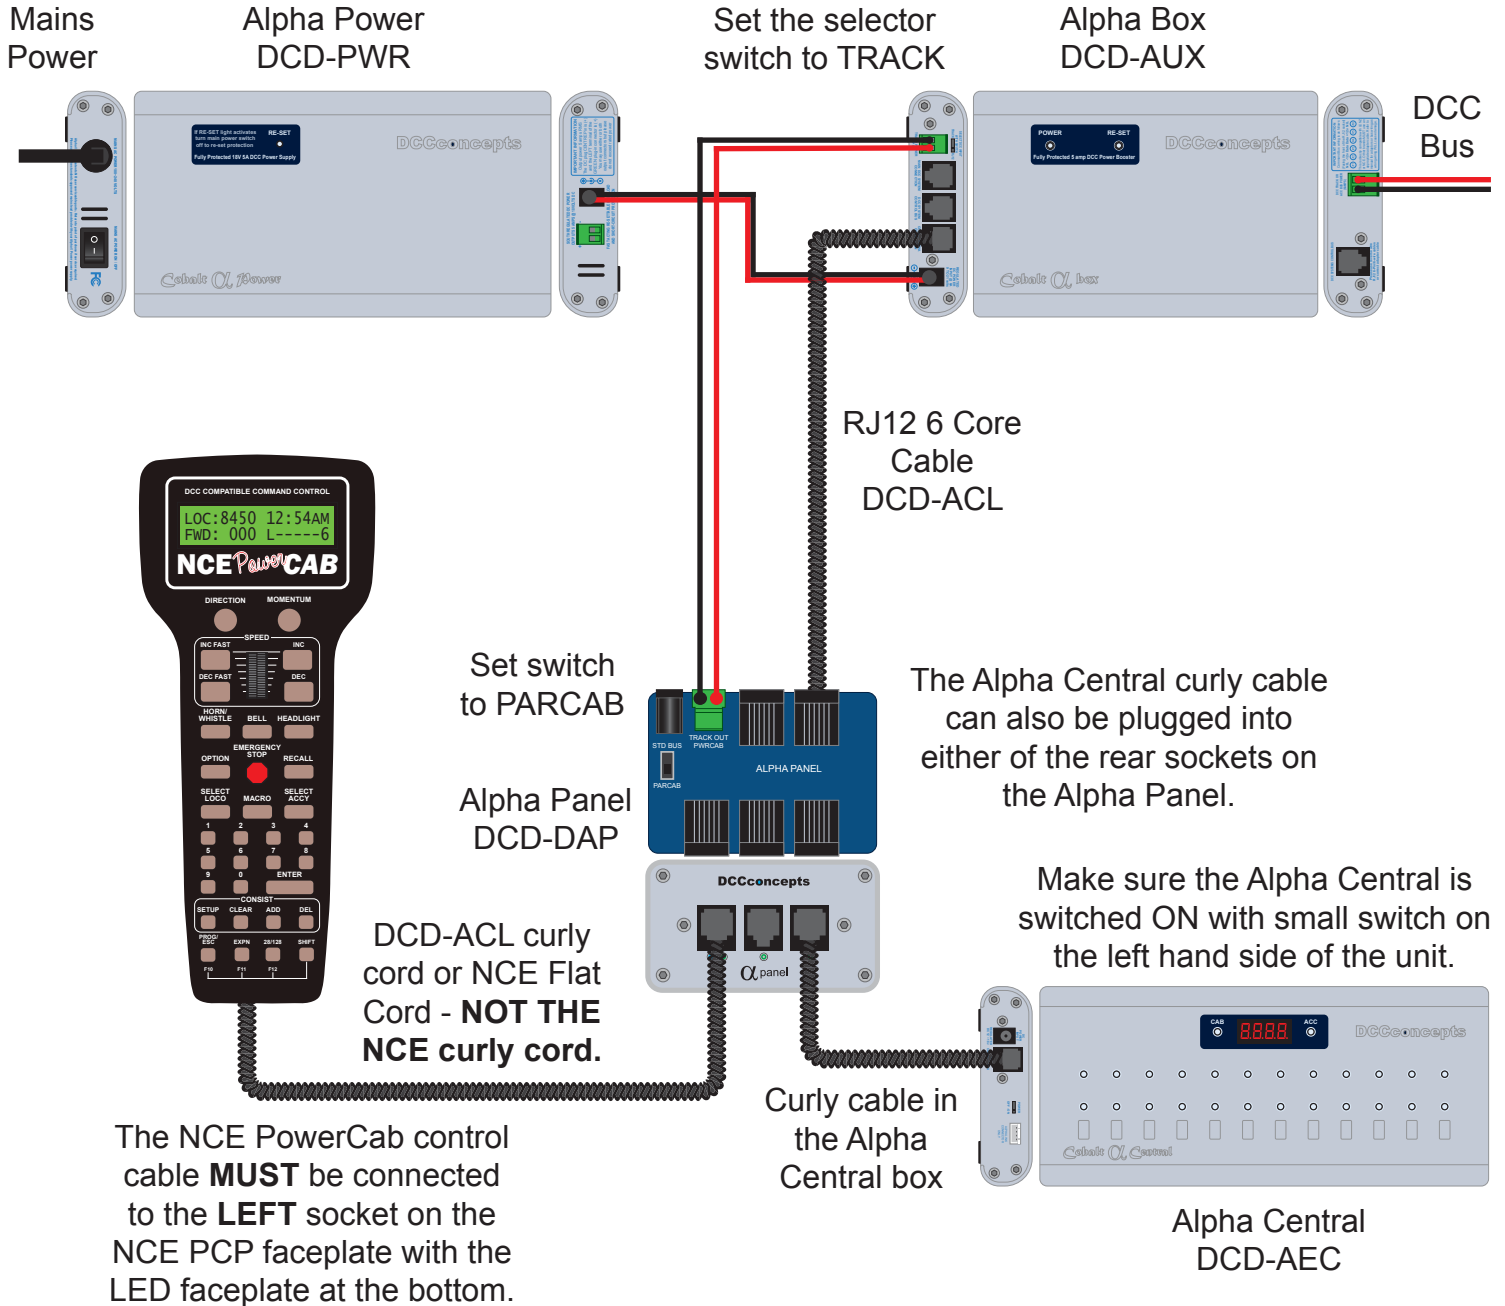

WARNING

Do not place any power supply in to the faceplate input DC power socket