

NOTE - ONLY connect one point motor connection lead at any one time or you may damage the circuit board.