

## ESP aegis Adding More Handsets Using The CAB EXT Ports


NCE PowerCab

NCE ProCab Handset

**Note: The NCE PowerCab is NOT supplied with the aegis system.**


Extra Handset Set to CAB ADDRESS

**3**

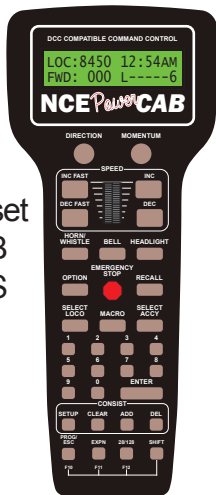

Extra Handset Set to CAB ADDRESS

**4**

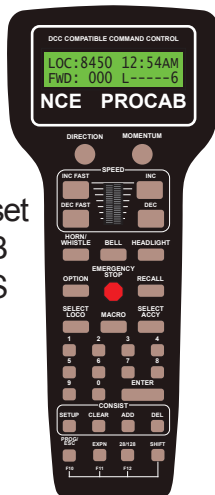


NCE Cab-06

Extra Handset Set to CAB ADDRESS

**5**



Alpha Panel DCD-DAP

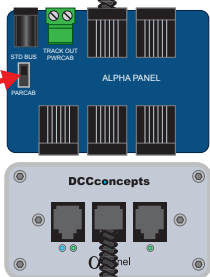

Switch set to STD BUS

RJ12 6pin Curly Cord For NCE Powercab and Cobalt Alpha DCD-ACL

**CAB PWR OUT Switched To ON**

**Red Headers Switched To OFF**


The NCE PowerCab **MUST** be set to CAB ADDRESS

**2**



aegis Power Supply  
24V 5 Amps  
DCP-24.5

ESP Ψ aegis 5 Amp Wireless System for PowerCab  
DCC-AEGIS.SET

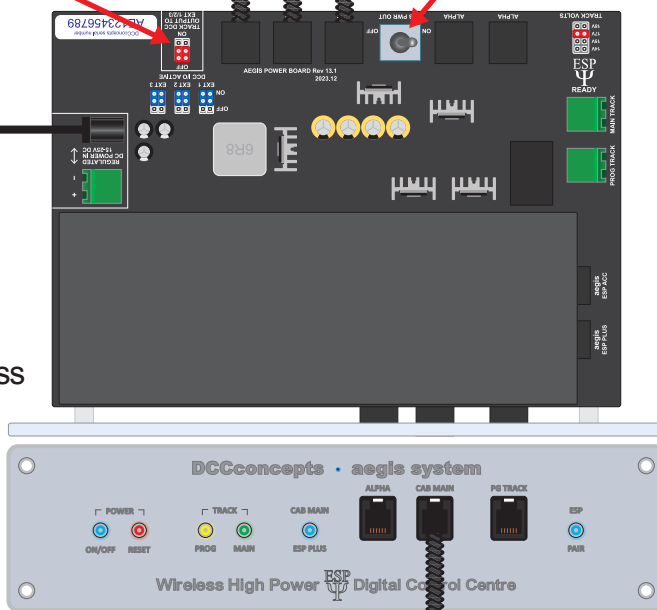

NCE PowerCab plugged into the CAB MAIN socket on the front

RJ12 6pin Curly Cord For NCE Powercab and Cobalt Alpha DCD-ACL

NCE PowerCab NCE-Pcab