





Cobalt iP Digital long wire and Diodes

DCP-CB1DiP
Cobalt iP Digital

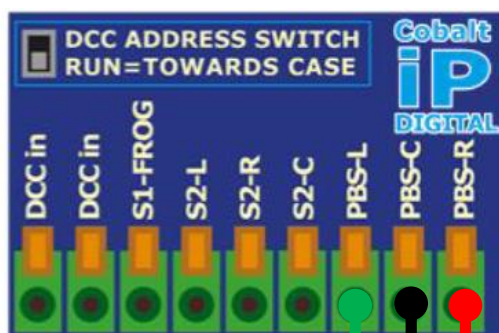

With longer wires, if random changing is observed then fit diodes in series like this

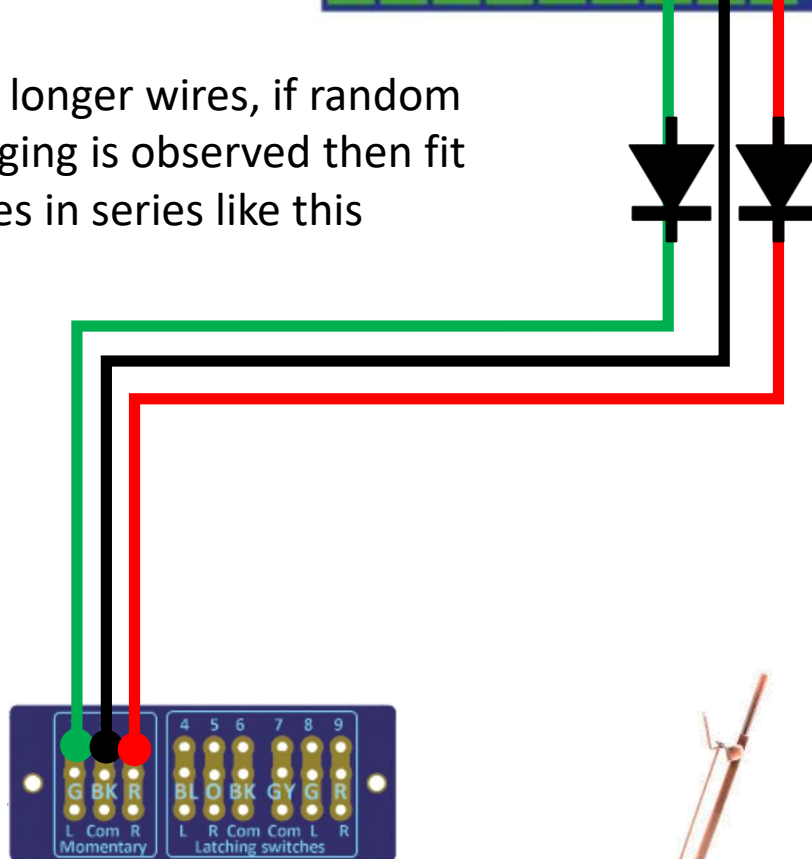

DCP-CBS
Cobalt S Point Lever



To reverse the output to match the Lever throw, swap the green and red wires at the relevant Cobalt S Lever or Cobalt iP Digital connection